

Chapter 14

Summary of CLI Environment Commands

The following sections explain each of the CLI environment commands. The commands are organized alphabetically.

set cli complete-on-space

Syntax	set cli complete-on-space (off on);
Description	Configure the keys to use for command completion.
Default	When you type a space or tab, the CLI performs command completion.
Options	off—Allow only a tab to be used for command completion. on—Allow either a space or a tab to be used for command completion.
Sample Output	<pre>user@host> set cli com<Space> user@host> set cli complete-on-space off user@host> set cli com<Tab> user@host> set cli complete-on-space on user@host></pre>
Usage Guidelines	See “Set Command Completion” on page 133.
Required Privilege Level	view

set cli idle-timeout

Syntax set cli idle-timeout <minutes>

Description Set the maximum time that an individual session can be idle before the user is logged off the router. The session times out after remaining at the CLI operational mode prompt for the specified time. The session can time out while monitoring log files.

Default If you do not issue this command, and the user's login class does not specify this value, the user is never forced off the system after extended idle times.

Options *minutes*—Maximum idle time.
Range: 0 through 100,000 minutes. Setting it to 0 disables the timeout.

Usage Guidelines See "Set the Idle Timeout" on page 132.

Required Privilege Level view

See Also idle-timeout on page 316

set cli prompt

Syntax set cli prompt *string*

Description Set the prompt to display within the CLI.

Default user@host>

Options *string*—CLI prompt. To include spaces in the prompt, enclose the string in quotation marks.

Sample Output user@host> set cli prompt "cli% "
 cli%

Usage Guidelines See "Set the CLI Prompt" on page 132.

Required Privilege Level view

set cli restart-on-upgrade

Syntax set cli restart-on-upgrade (off | on)

Description For an individual session, set the CLI to prompt you to restart the router after upgrading the software.

Default The CLI prompts you to restart, unless the screen length has been set to 0.

Options off—Disables the prompt.

on—Enables the prompt.

Usage Guidelines See "Set CLI to Prompt after a Software Upgrade" on page 133.

Required Privilege Level view

set cli screen-length

Syntax	set cli screen-length <i>lines</i>
Description	Set the number of lines of text that the screen can display.
Options	<i>lines</i> —Number of lines on the screen. Range: 0 through 100,000 Default: 24 lines
Sample Output	<pre>user@host> set cli screen-length 66 Screen length is set to 66 user@host></pre>
Usage Guidelines	See “Set the Screen Length” on page 132.
Required Privilege Level	view

set cli screen-width

Syntax	set cli screen-width <i>width</i>
Description	Set the number of characters that the screen can display on a single line.
Options	<i>width</i> —Number of columns on the screen. Range: 0 through 100,000 Default: 80 columns
Sample Output	<pre>user@host> set cli screen-width 40 Screen width set to 40 user@host></pre>
Usage Guidelines	See “Set the CLI Prompt” on page 132.
Required Privilege Level	view

set cli terminal

Syntax	set cli terminal <i>terminal-type</i>
Description	Set the terminal type.
Options	<i>terminal-type</i> —Type of terminal that is connected to the port. Values: ansi, vt100, small-xterm, xterm Default: The terminal type is unknown.
Usage Guidelines	See “Set the Terminal Type” on page 132.
Required Privilege Level	view

set date

Syntax	set date <i>YYYYMMDDhhmm.ss</i>
Description	Set the current date and time on the router.
Options	<i>YYYYMMDDhhmm.ss</i> —Date and time to set. <i>YYYY</i> is the four-digit year, <i>MM</i> is the two-digit month, <i>DD</i> is the two-digit date, <i>hh</i> is the two-digit hour, <i>mm</i> is the two-digit minute, and <i>ss</i> is the two-digit second. At a minimum, you must specify the two-digit minute. All other parts of the date and time are optional.
Usage Guidelines	See “Set the Current Date and Time” on page 127.
Required Privilege Level	view
See Also	ntp on page 321, time-zone on page 333

set date ntp

Syntax	set date ntp < <i>ntp-server</i> >
Description	Use an NTP server to synchronize the current date and time setting on the router. You do not need to reboot the router when you use the set date ntp command.
Options	none—Uses system NTP server list. <i>ntp-server</i> —IP address of one or more NTP servers to query. When querying more than one server, the IP addresses are enclosed in quotes using the format “ <i>ip-address ip-address</i> ”, for example, “200.49.40.1 129.127.28.4”.
Usage Guidelines	See “Set Date and Time from NTP Servers” on page 128.
Required Privilege Level	view
Sample Output: set date ntp (to query one server)	<pre>user@host> set date ntp 172.17.12.9 14 Sep 22:00:50 ntpdate[20603]: step time server 172.17.12.9 offset 0.000461 sec</pre>
Sample Output: set date ntp (to query two servers)	<pre>user@host> set date ntp "200.49.40.1 129.127.28.4" 10 Feb 13:50:21 ntpdate[794]: step time server 129.127.28.4 offset 0.000163 sec</pre>

show cli

Syntax	show cli
Description	Display information about how the CLI environment is configured.
Sample Output	<pre>user@host> show cli CLI screen length set to 60 CLI screen width set to 80 CLI complete-on-space set to on user@host></pre>
Usage Guidelines	See “Display CLI Settings” on page 133.
Required Privilege Level	view

show cli history

Syntax show cli history < count>

Description List recent commands that you issued in the CLI and the time they were issued.

If you issue the run show cli history command from configuration mode, the command lists the most recent configuration mode commands that you issued and the time they were issued.

Options count—(Optional) Number of recent commands to display.
Range: 0 through 65,535
Default: 100

Sample Output

```
user@host> show cli history
12:33:39 -- configure
12:42:52 -- show cli history
12:43:02 -- show interfaces terse
12:43:14 -- show interfaces lo0
12:43:20 -- show bgp
12:43:28 -- show bgp next-hop-database
12:43:32 -- show cli history
user@host> configure
...
[edit]
user@host# run show cli history
12:40:08 -- show
12:40:17 -- edit protocols
12:40:27 -- set isis
12:40:29 -- edit isis
12:40:40 -- run show cli history
[edit protocols isis]
user@host#
```

Usage Guidelines See the sections “Display CLI Command History” on page 128 and “Display Configuration Mode Command History” on page 165.

Required Privilege Level view

